

## Insta Divider Wall (6010) Instalation Guide

### 1 Install stabilizer feet to the panels




Slide spring on the shaft of the stabilizer. Push the shaft thru the hole of the panel. Secure lock nut. **Make sure you see 2 to 3 full threads.**

### 2 Place instadivider panels



Position panels in desired location within the container. Line each half up with each other across the container.

### 3 Place stabilizer

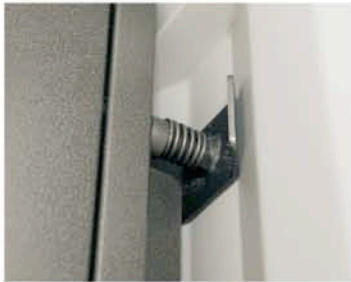

Panel stabilizer feet fall into place along container wall indentation.

### 4 Secure instadivider panels



Form a V with the two panels the press into place.

### 5 Secure instadivider panels



Insert carriage bolts with lock nuts. This secures the instadivider panels in place.

### 6 Optional lag bolts



For extra security and strength install lag bolt to the floor.

\*Products may not be exactly as shown